


F221 - Spare Parts List

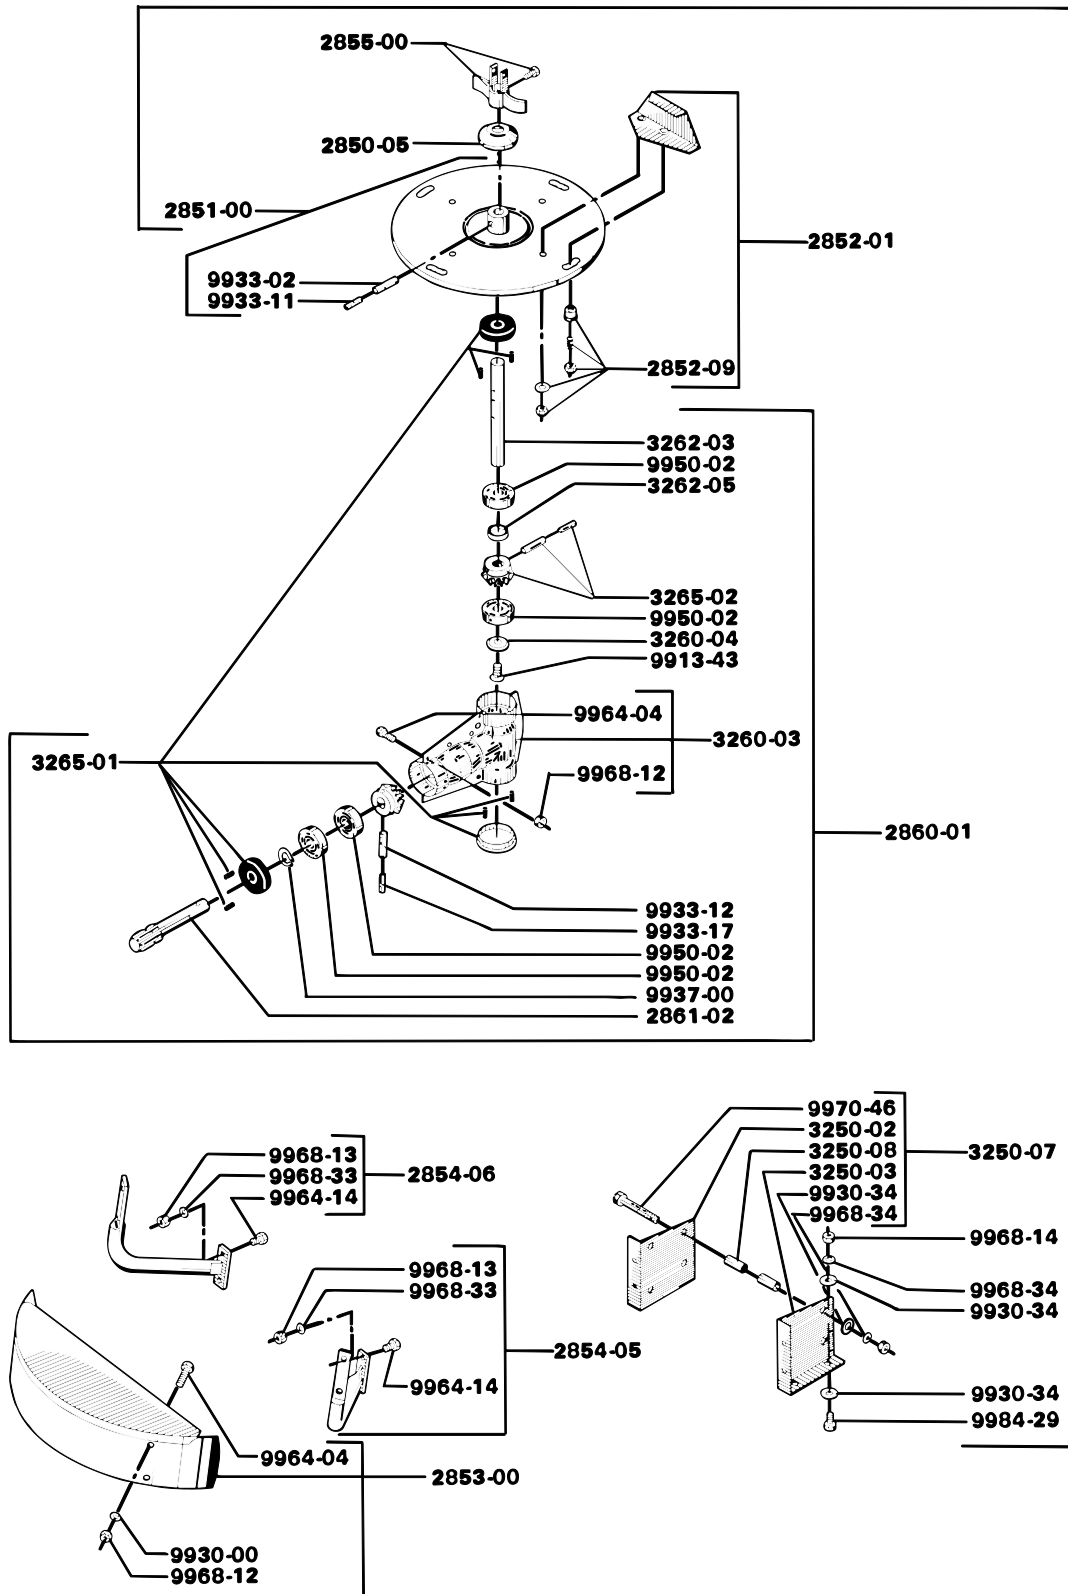

Part No.	Teil Nr.	Partie No.	Designation
2850-00			Spreader aggregate
2850-05			Tightening washer
2851-00			Spreader disc
2852-01			Vane, complete
2852-09			Locking pin w/spring and nut
2853-00			Shield, complete
2854-05			Mounting for shield, left
2854-06			Mounting for shield, right
2855-00			Spreading device, complete
2860-01			Gear, complete
2861-02			Drive shaft
3250-02			Console, right
3250-03			Console, left
3250-07			Console set
3250-08			Spacer
3260-03			Gear housing
3260-04			Washer
3262-03			Exit shaft
3262-05			Spacer for gear-wheel
3265-01			Gasket set
3265-02			2 gear wheels with pins
9913-43			Lock screw, M10 x 20 mm
9930-00			Washer, $\phi 6$ mm
9930-34			Washer, $\phi 10$ mm
9933-02			Pin, $\phi 8$ x 40 mm
9933-11			Pin, $\phi 5$ x 40 mm
9933-12			Pin, $\phi 8$ x 45 mm
9933-17			Pin, $\phi 5$ x 45 mm
9937-00			Seeger circlip, UK 25 x 1,2 mm
9950-02			Ball bearing, 6305 x 2 RS
9964-04			Set screw, M6 x 15 mm
9964-14			Set screw, M8 x 20 mm
9964-29			Set screw, M10 x 25 mm
9968-12			Nut, M6
9968-13			Nut, M8
9968-14			Nut, M10
9968-33			Starwasher, $\phi 8$ mm
9968-34			Starwasher, $\phi 10$ mm
9970-46			Bolt, M10 x 110 mm