




# beqballe spare parts list

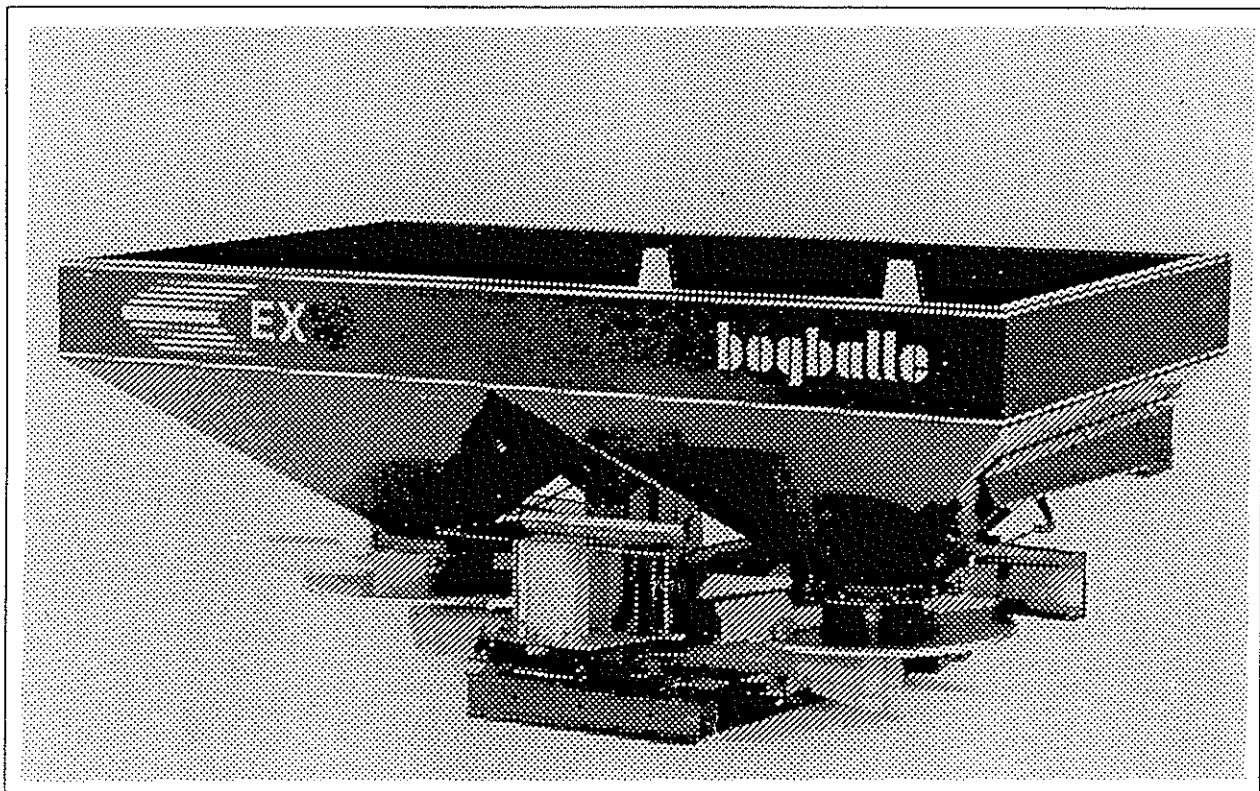


**EX - EXW**

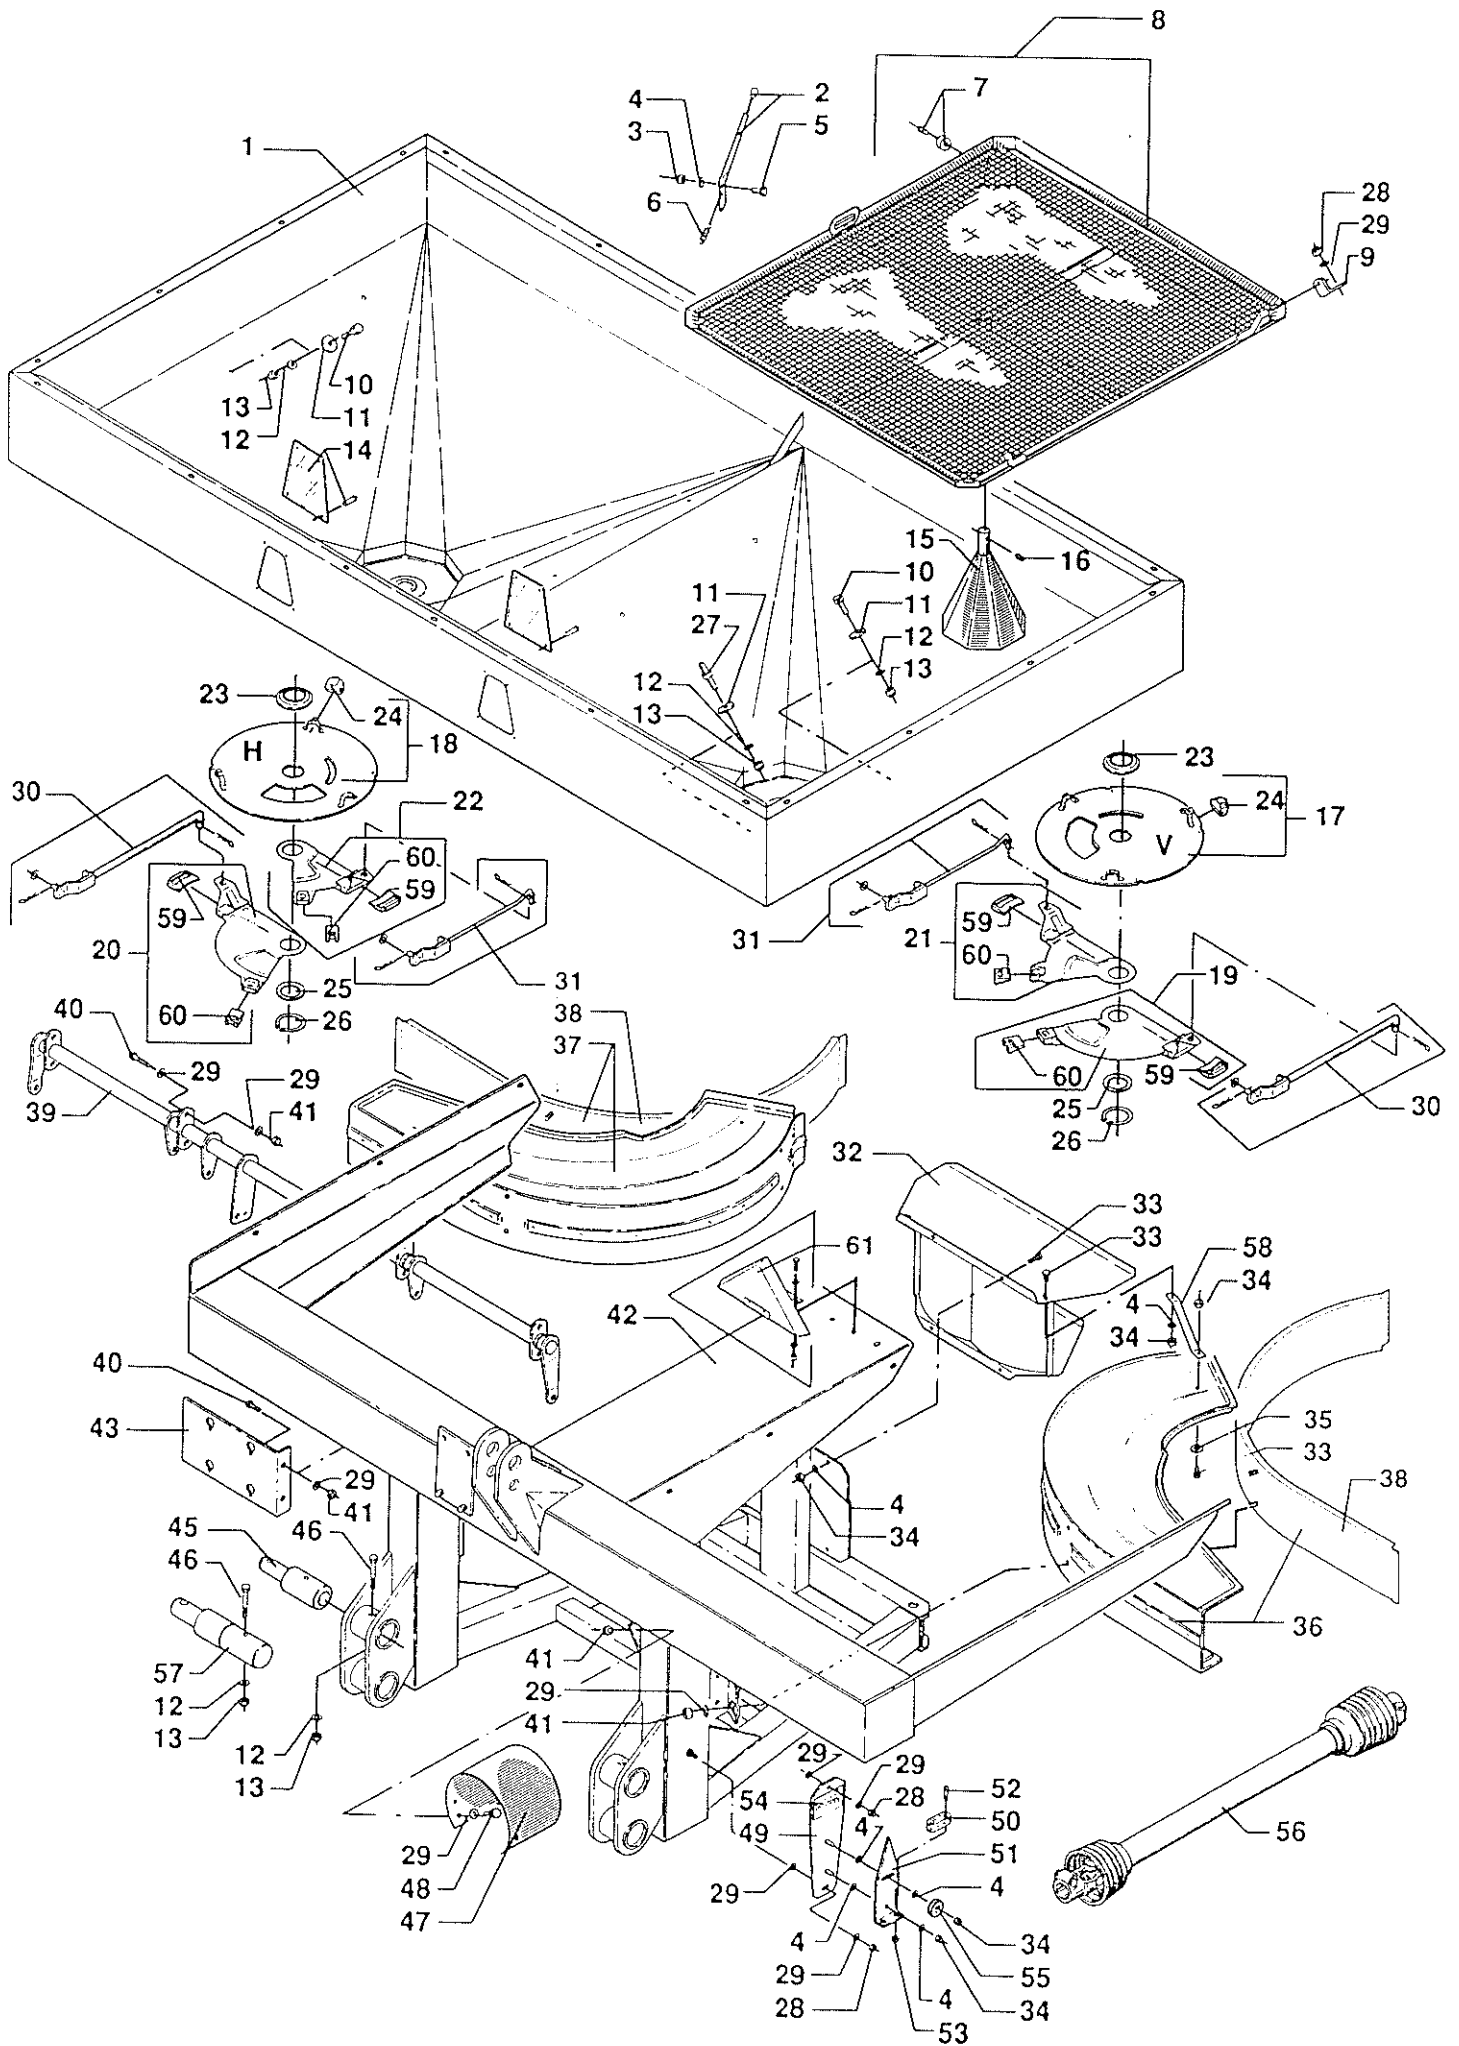


Pos. No.	Order No.	Notes	Pos. No.	Order No.	Notes
1	4510-04		51	4930-80	
2	4510-09		52	9929-39	M4 x 25
3	9969-16	LM6	53	9968-78	M4
4	9930-02	D6/12	54	9991-95	
5	9961-12	M6 x 20	55	9990-43	
6	9934-13	∅1,5 x 11 x 32	56	9985-40	810 mm
7	4513-07		57	4223-21	Cat. 3
8	4513-02		58	4571-04	
9	<del>4930-69</del>	4930-69	59	4412-20	
10	9963-01	M10 x 25	60	4412-21	
11	3210-05		61	4573-01	
12	9968-44	D10/21			
13	9969-45	LM10			
14	4110-31				
15	4016-05				
16	9913-20	M8 x 10			
17	4512-13	Left			
18	4512-14	Right			
19	4512-05	Left			
20	4512-06	Right			
21	4512-08	Left			
22	4512-09	Right			
23	4512-12				
24	4512-11				
25	4012-11				
26	9937-30	U 44			
27	4310-07				
28	9969-32	LM8			
29	9930-32	D8/17			
30	4541-03				
31	4541-04				
32	4572-01				
33	9961-11	M6 x 12			
34	9969-15	M6			
35	9930-03	D6/18			
36	4571-01				
37	4571-02				
38	4571-03				
39	4540-01				
40	9962-04	M8 x 20			
41	9969-31	M8			
42	4520-01	EX			
42	4520-20	EXW			
43	4520-11				
45	4223-24	Cat. 2			
46	9963-03	M10 x 75			
47	4470-01				
48	9962-03	M8 x 16			
49	4930-82				
50	9987-12				

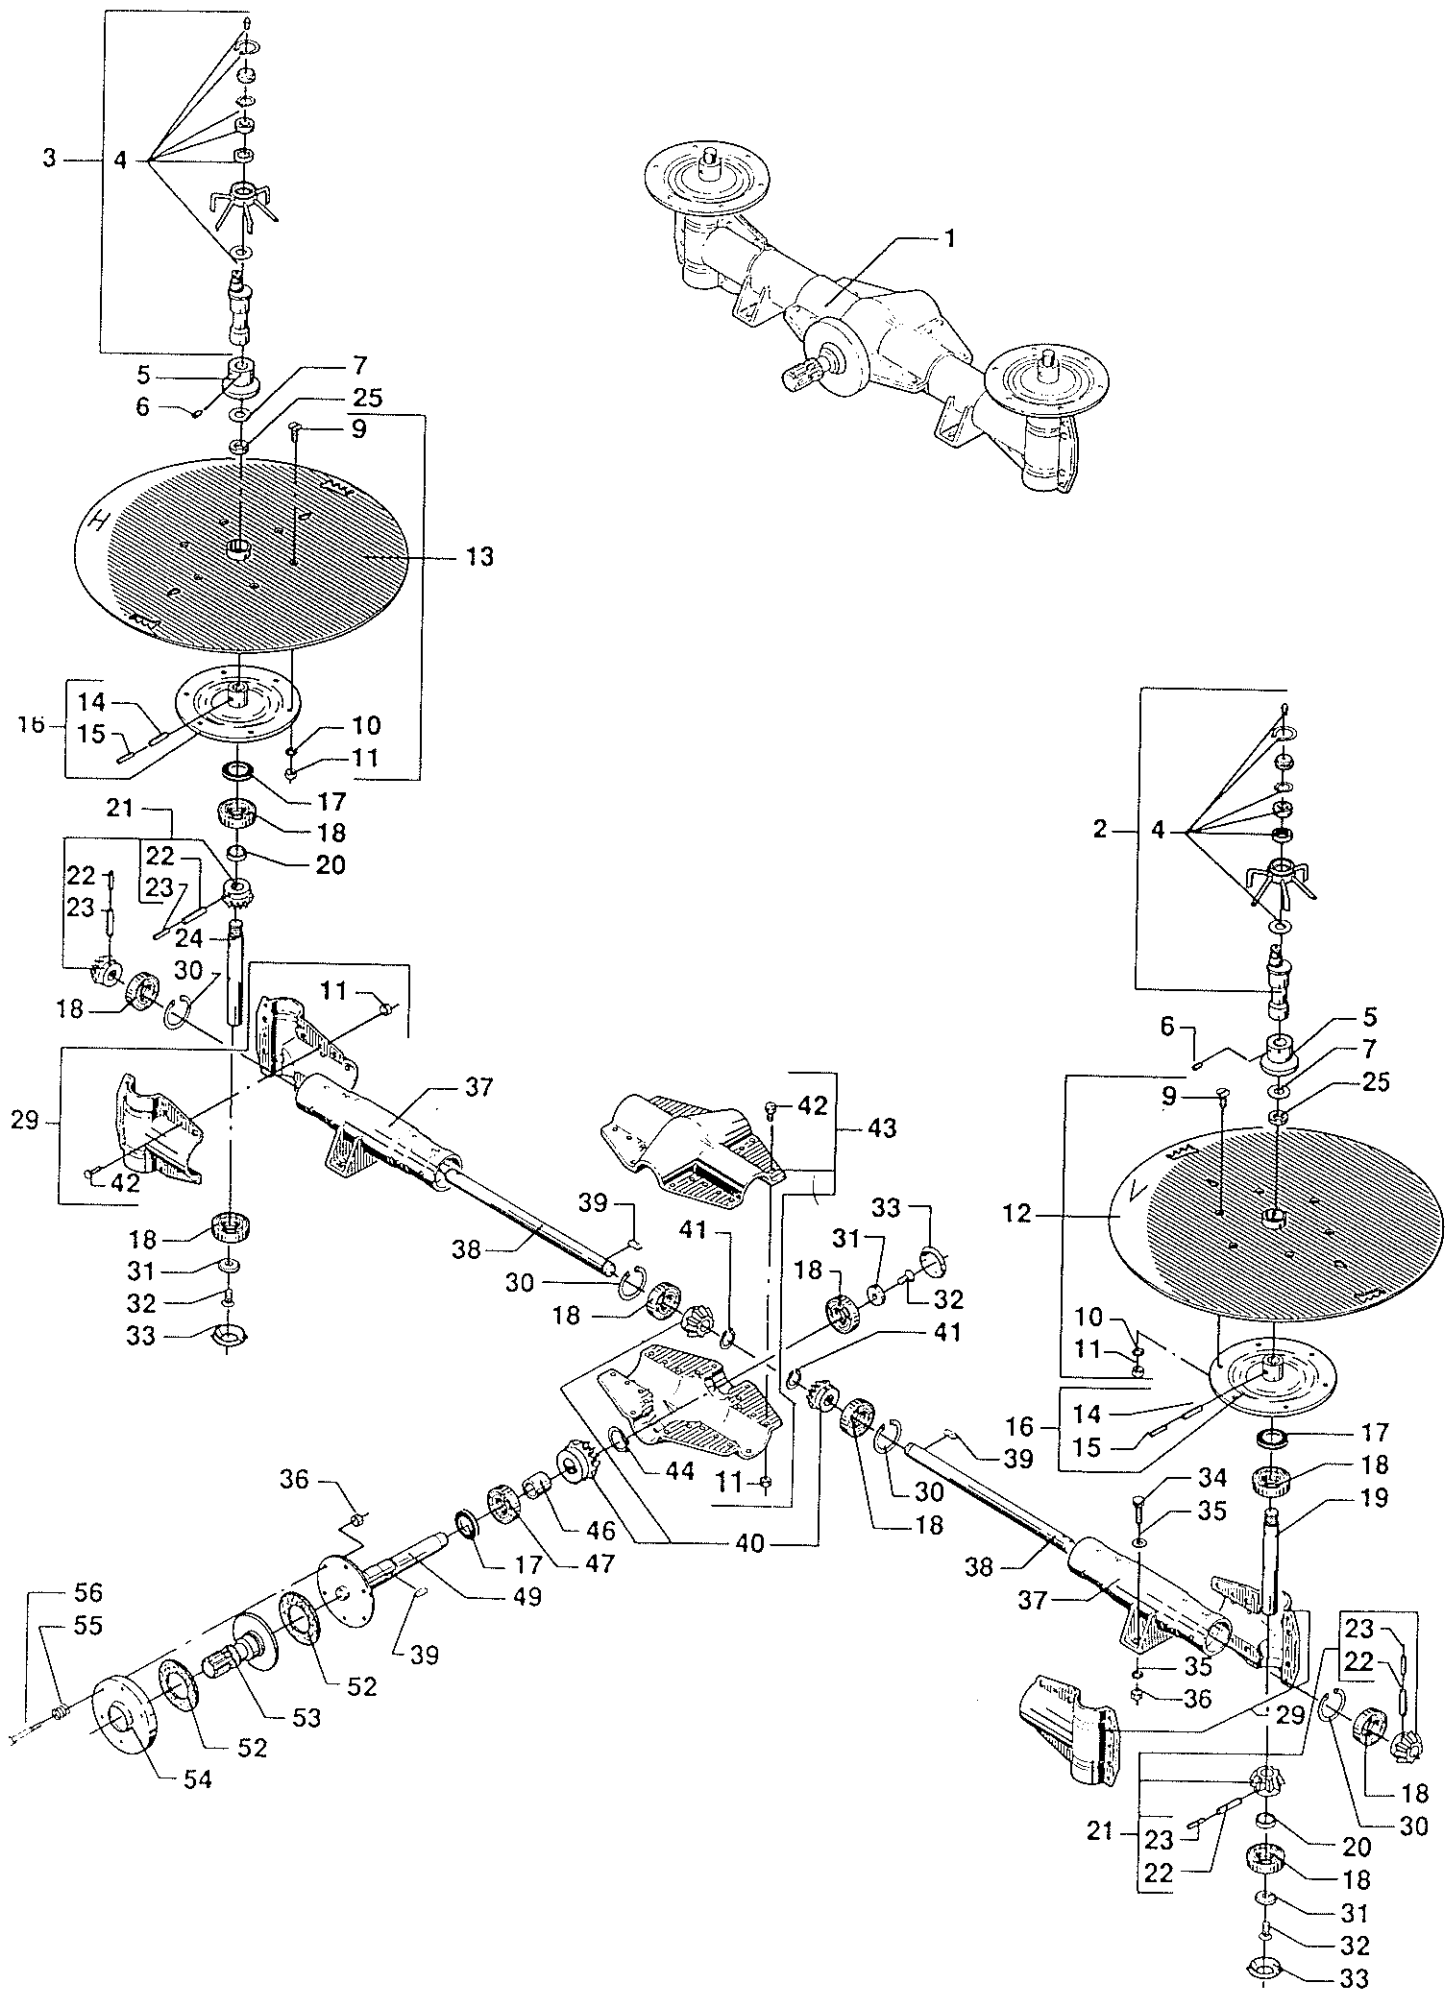

Pos. No.	Order No.	Notes	Pos. No.	Order No.	Notes
1	4550-02				
2	4160-01	"R"			
3	4160-02	"L"			
4	4056-10				
5	4158-05				
6	9913-20	M8 x 10			
7	4160-05	ø20 x ø35			
9	9929-35	M8 x 20			
10	9968-71	SS8			
11	9969-31	M8			
12	4550-05	Left			
13	4550-06	Right			
14	9933-02	ø8 x 40			
15	9933-11	ø5 x 40			
16	4051-05				
17	9936-37	35 x 62 x 12			
18	9950-02	6305-2RS			
19	4155-04	"R"			
20	3262-05				
21	3265-02				
22	9933-12	ø8 x 45			
23	9933-17	ø5 x 45			
24	4062-05	"L"			
25	4560-01	ø20 x ø30 x 5			
29	4454-05				
30	9937-40	I 60			
31	3260-04				
32	<del>9913-13</del>	M10 x 25 9963-07			
33	3260-05				
34	9965-01	M12 x 35			
35	9930-35	D12/24			
36	9969-60	M12			
37	4557-02				
38	4156-02				
39	9931-56	8 x 7 x 25			
40	4252-01	"E" Z 17 + "E" Z 22			
41	9937-00	U 25			
42	9962-03	M8 x 16			
43	4460-01				
44	9937-18	U 28			
46	4452-05				
47	9950-03	6206 2RS			
49	4452-02				
52	3260-09				
53	3263-00				
54	3260-07				
55	9934-03	6 x 25 x 32			
56	9965-02	M12 x 65			

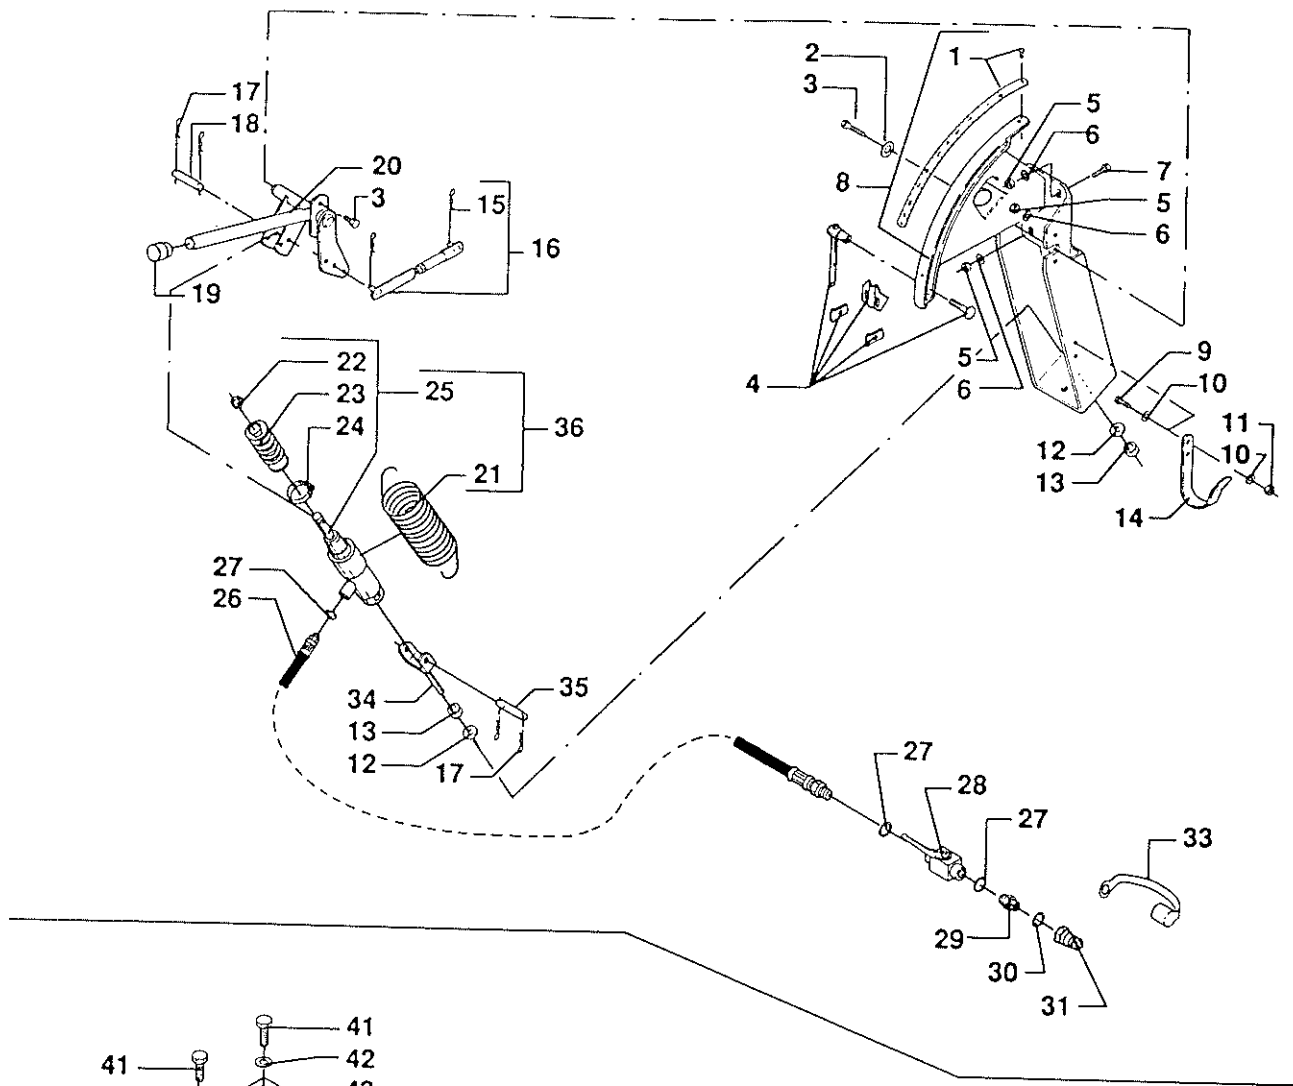

**EXW**

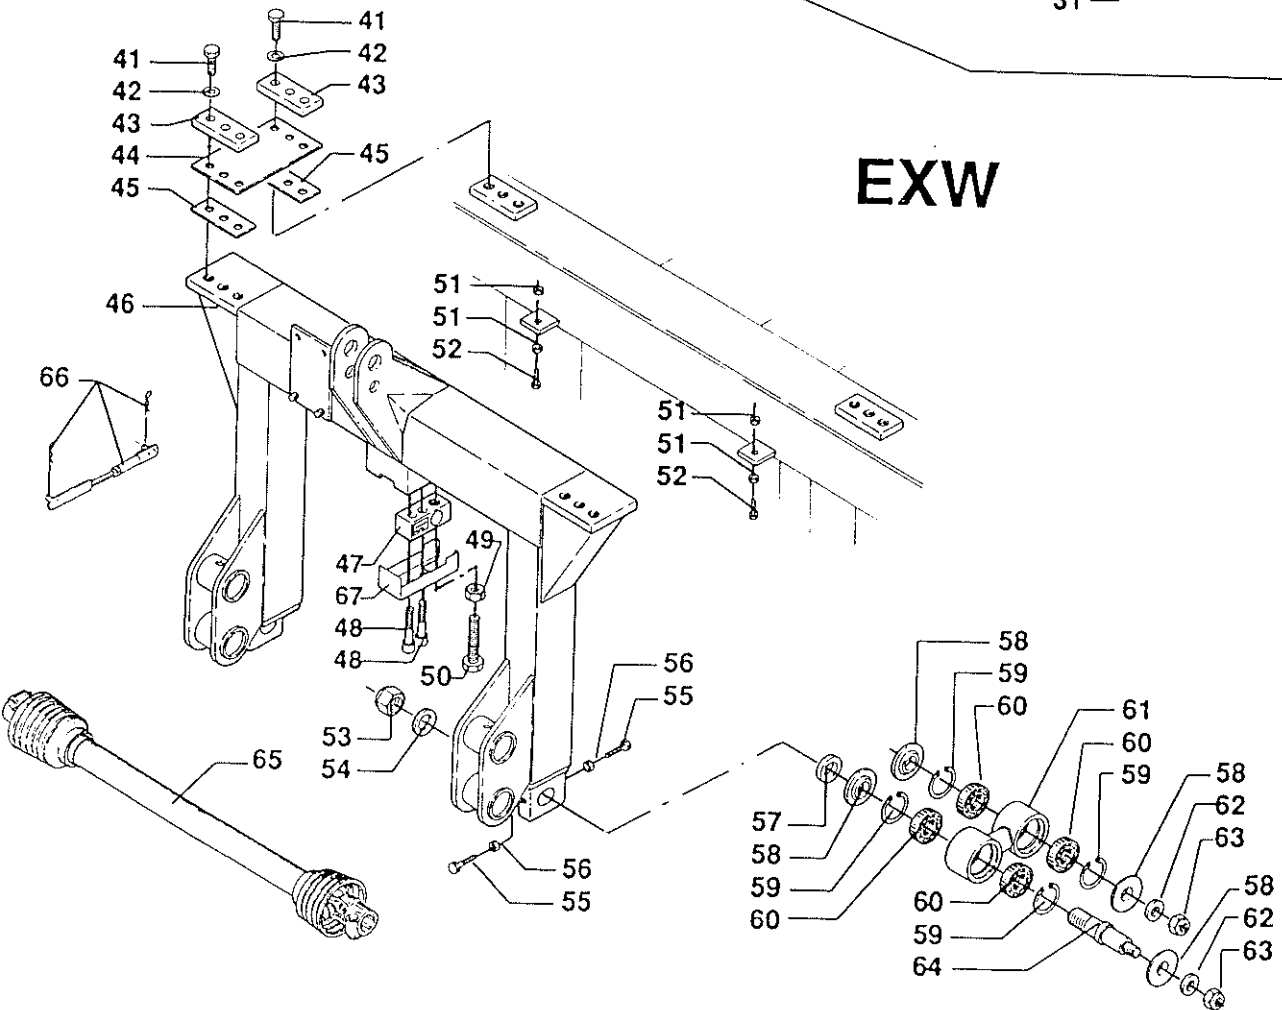

Pos. No.	Order No.	Notes	Pos. No.	Order No.	Notes
1	4581-03		41	9964-73	M16 x 45
2	2810-18	D8/25	42	9930-20	D17/30
3	9962-03	M8 x 16	43	4220-26	
4	3961-30		44	4220-25	
5	9969-31	M8	45	4220-27	
6	9930-32	D8/17	46	4522-30	
7	9962-04	M8 x 20	47	9942-33	
8	4581-04		48	9913-41	M16 x 75 - kv. 12.9
9	9961-04	M6 x 16	49	9968-97	M20
10	9930-02	D6/12	50	4220-29	M20 x 100
11	9969-15	M6	51	9969-46	M10
12	9930-35	D12/24	52	9963-12	M10 x 30
13	9969-60	M12	53	9968-98	M30
14	4581-36		54	4220-36	D30/52
15	9934-31		55	9965-05	M12 x 40
16	4581-30	225/260	56	9969-60	M12
17	9934-32		57	4220-38	D30/52
18	4581-29		58	4220-33	
19	9990-52		59	9937-45	I 72
20	4581-10		60	9950-05	6306-2RS
21	9934-14		61	4220-30	
22	9990-60	D24	62	4220-37	D20/40
23	9987-04		63	9969-94	LM 20
24	<del>9990-51</del>	D40 9990-61	64	4222-43	
25	4581-15		65	9985-33	1010 mm
26	9983-29		66	4584-10	EXW
27	9936-79		66	4952-90	EXW 36 m
28	9982-06		67	4522-40	
29	9990-84				
30	9936-80				
31	9983-09				
33	9990-19				
34	4581-25				
35	4581-28				
36	4581-37				

# bøgballe

Spare parts list EX - EXW from machine No. 101

Lista de piezas de recambio

Liste de pièce de rechange

Reservedelsliste

Onderdelenlijst

Varaosaluettelo

Reservdelslista

Ersatzteilliste

# bøgballe

A. P. LAURSEN A/S . 7171 ULDUM  
DANMARK . TELEFON 75 89 32 66  
TELEFAX 75 89 37 66